

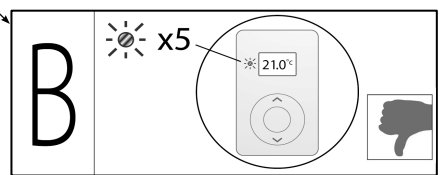
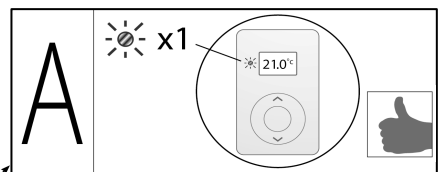
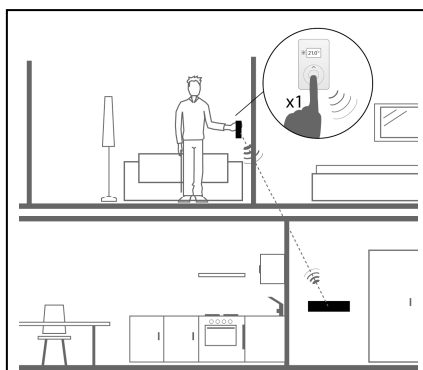
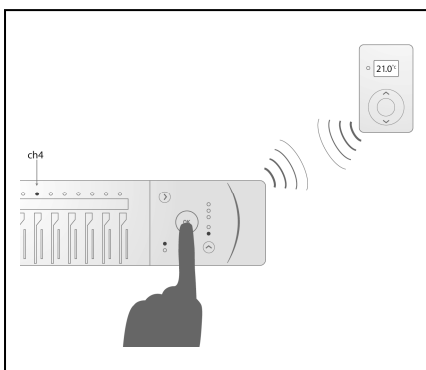
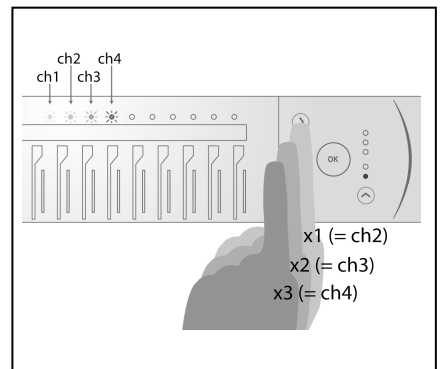
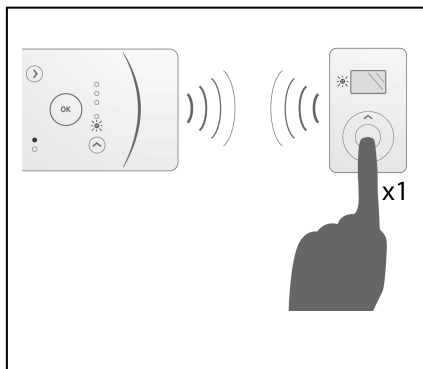
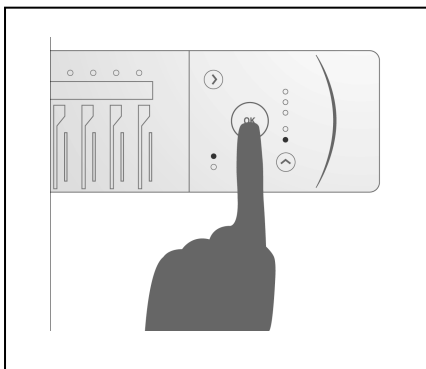
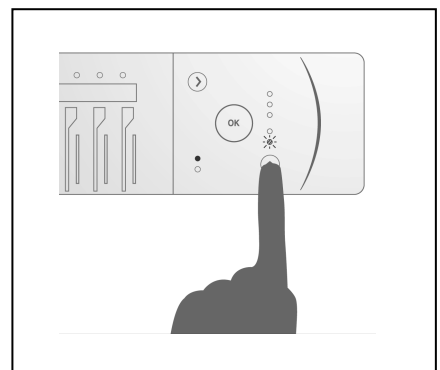
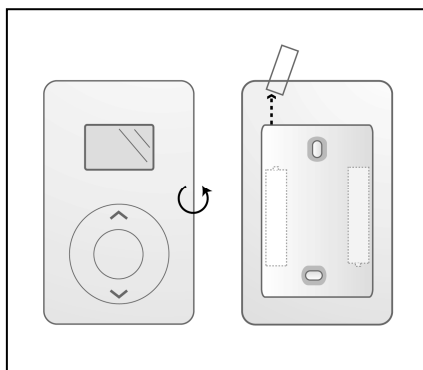
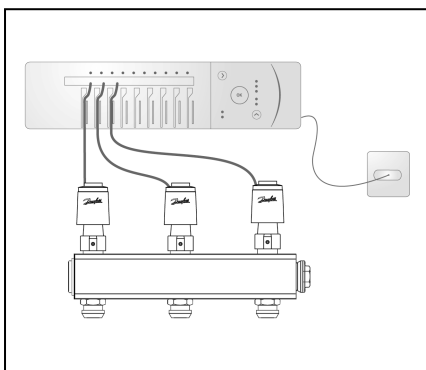
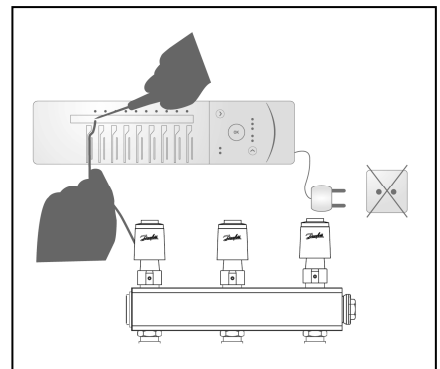


JUPITER










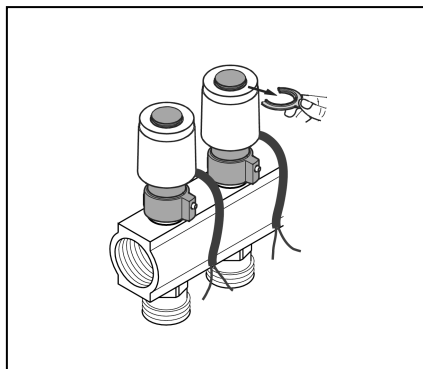


Wireless control system CF2

Guide to installation of wireless room thermostats

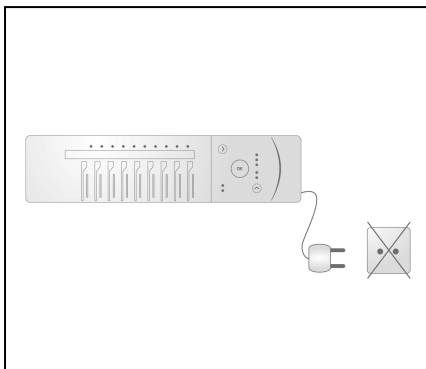

JUPITER

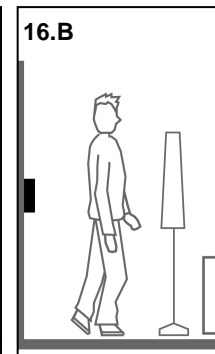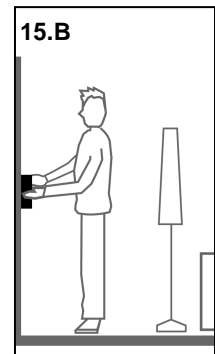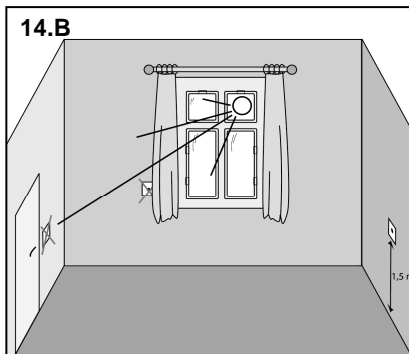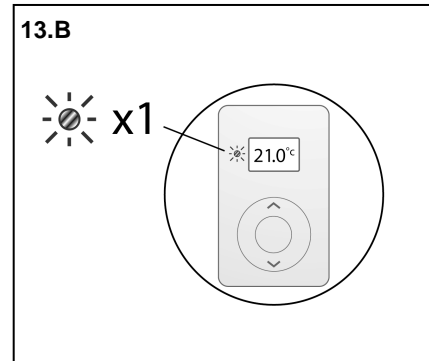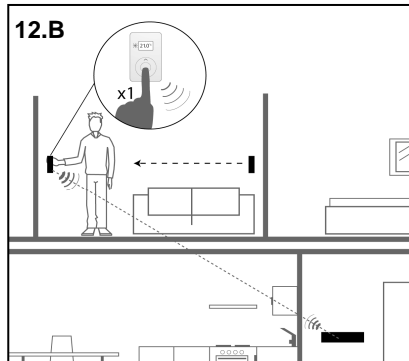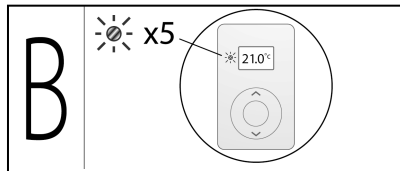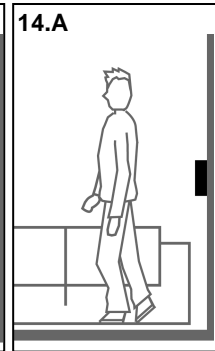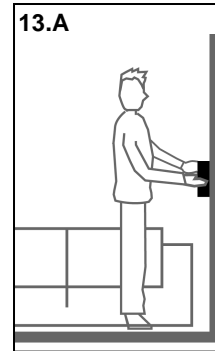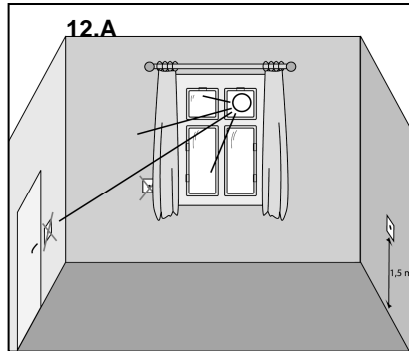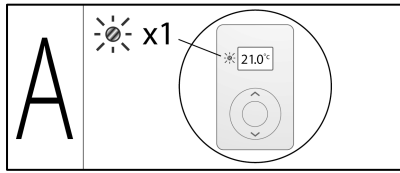

Uninstallation

